


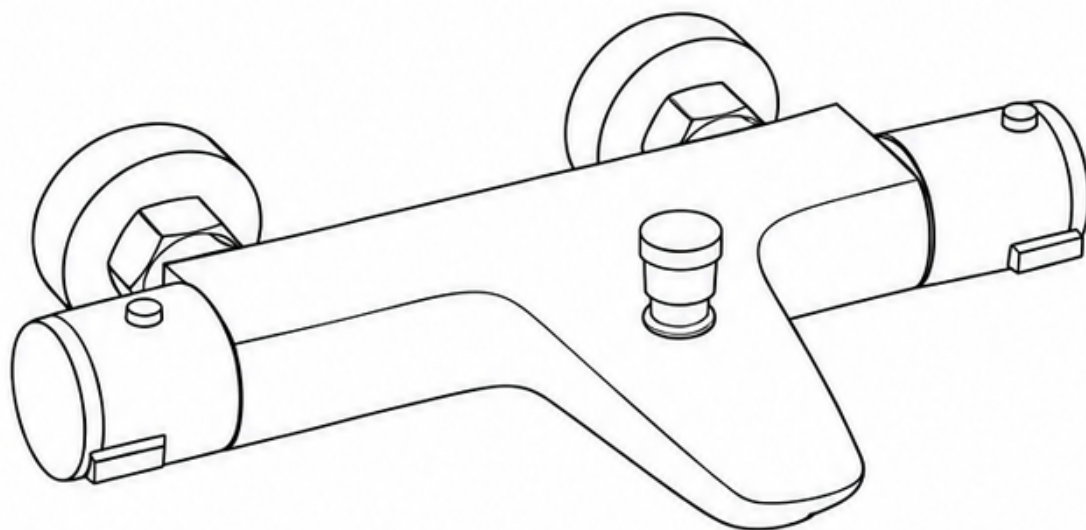


LOMAZOO

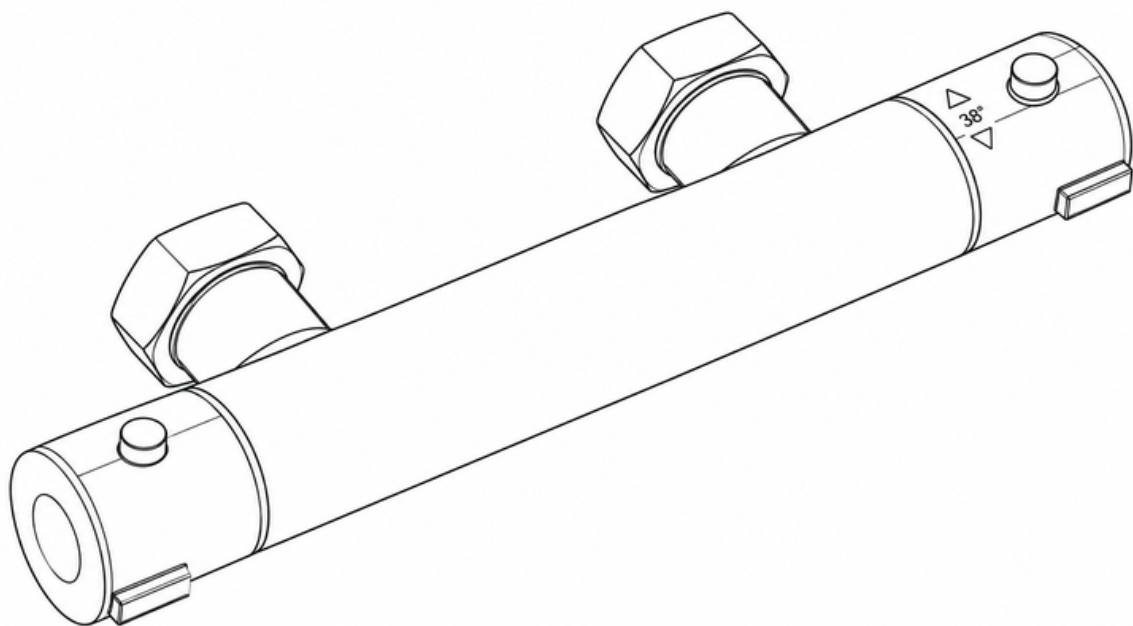


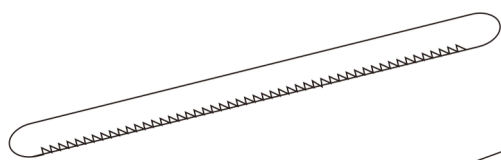


serrated

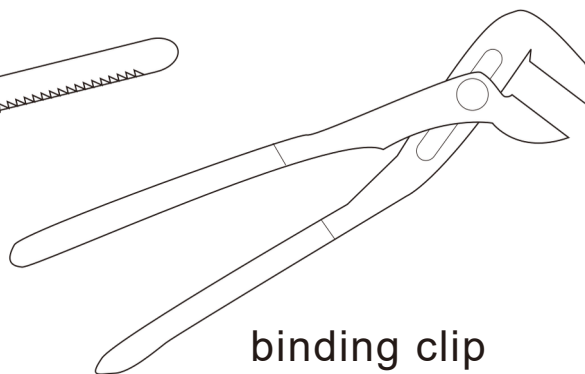


binding clip

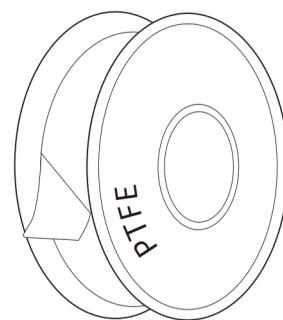

Teflon tape

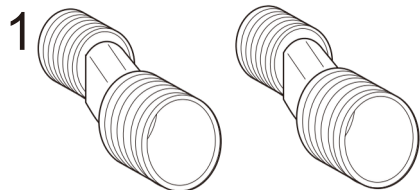



crura

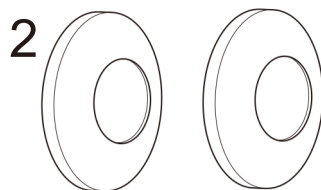


decorative cover



gasket

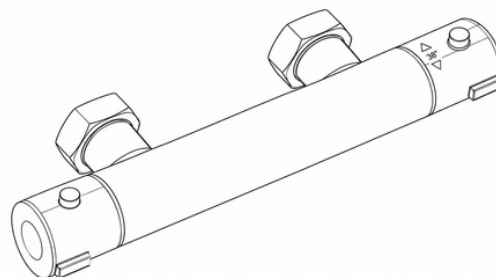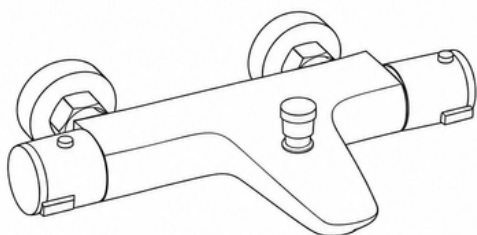


1

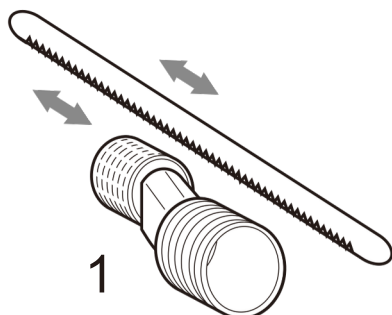


1

Use a serration to increase the clearance of the crank thread, but do not cut it.


1

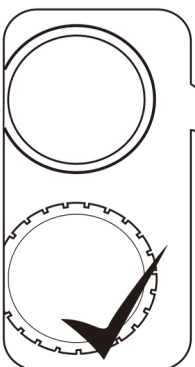


2

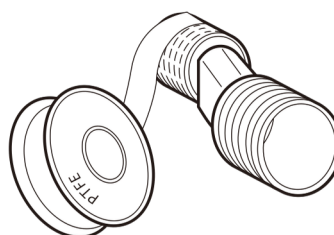

Wrap a strip of raw material around the leg.

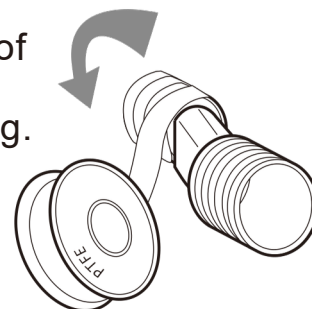


3

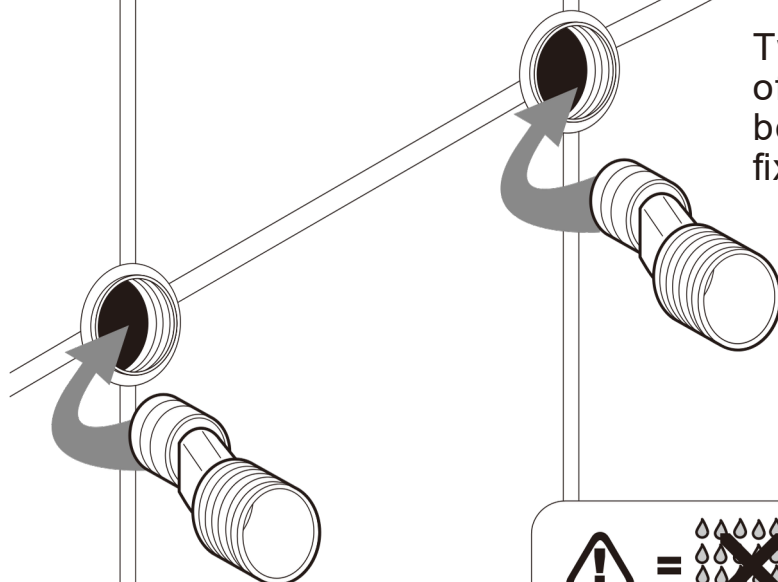

Twist the twisted leg of the raw material belt to the wall with fixed pliers, do not leak




4

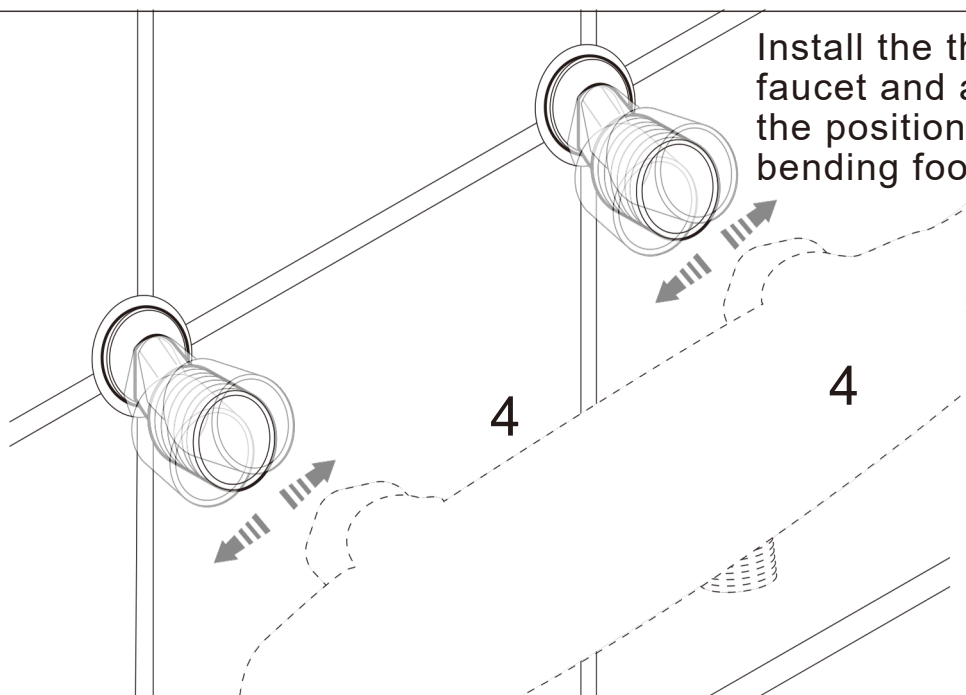

Install the thermostatic faucet and adjust the position of the bending foot


5

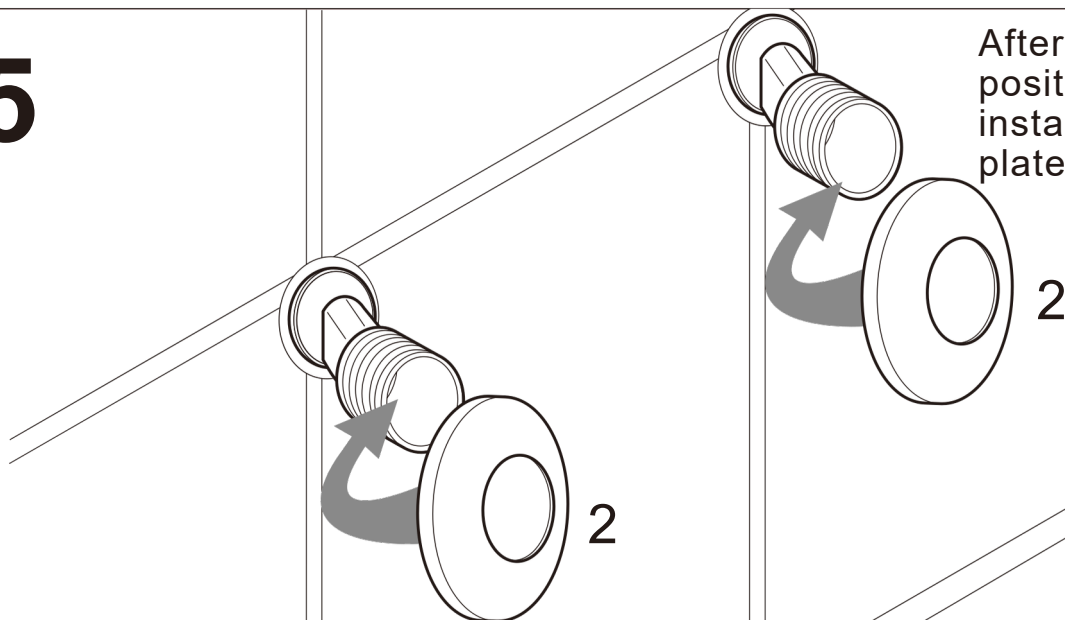

After determining the position of the foot, install the decorative plate


6

First put the rubber gasket on the curved foot, and then fix the thermostatic faucet with fixing pliers.

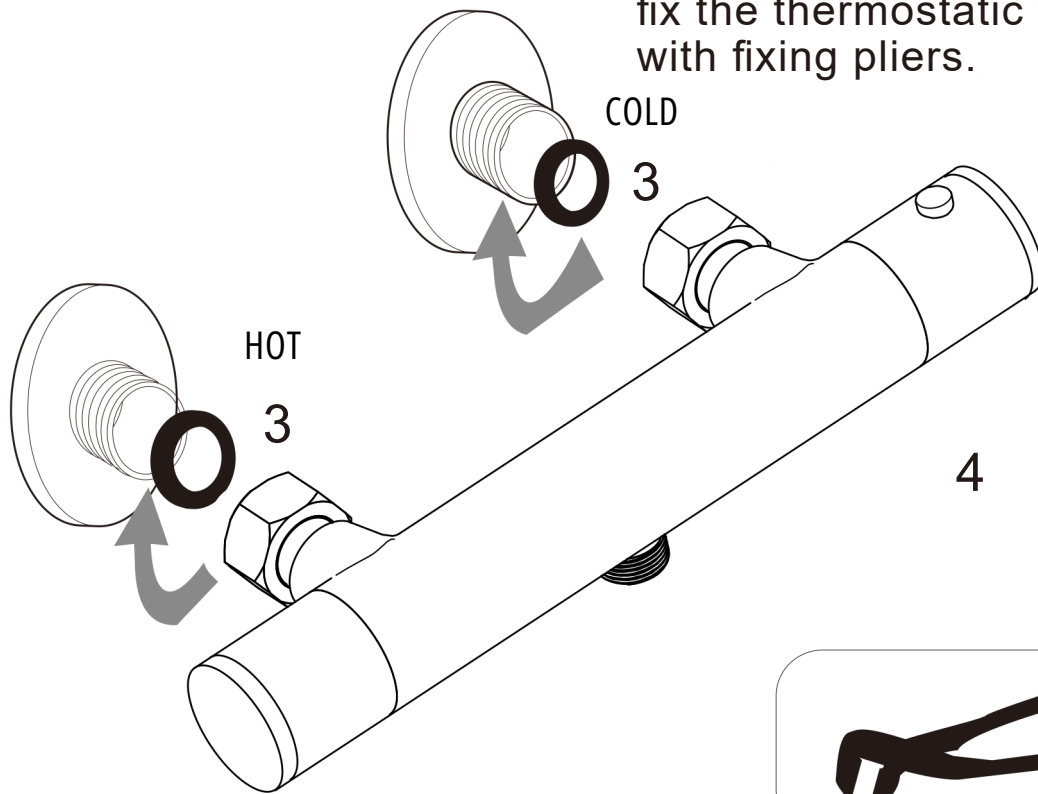


7

After installation, turn on the thermostatic faucet for 2 minutes to observe whether the installation leaks.

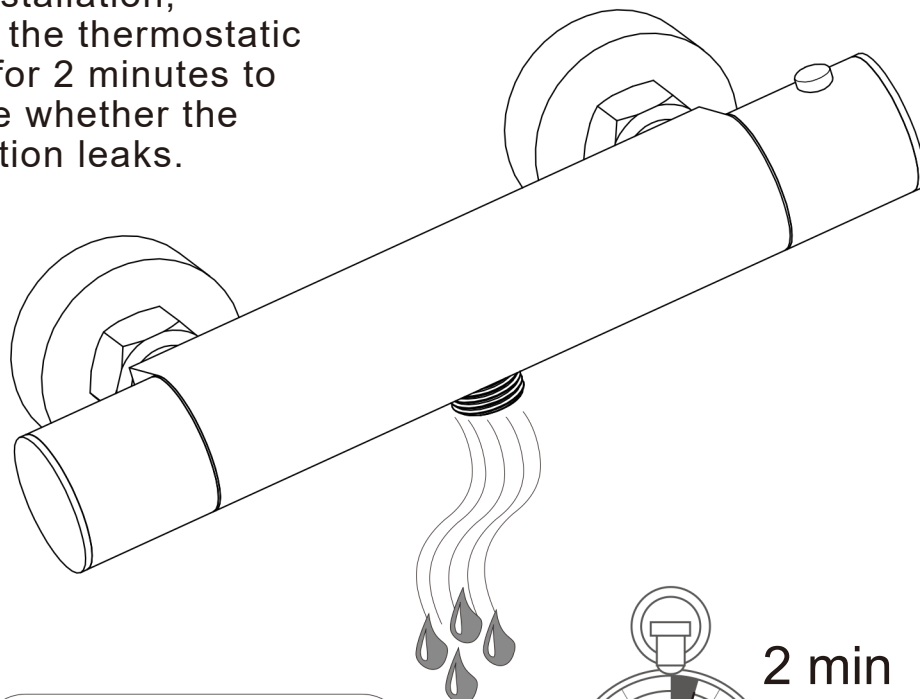

=

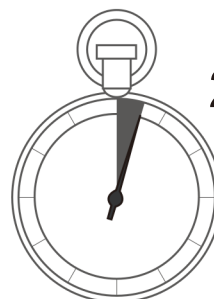

2 min